IMPRESSION

Leader

© 2011 Leader International Inc.
Impression is a trademark and service mark of Leader International Inc.
All products distributed by Leader International Inc. Unless otherwise indicated.
All other brand names, trademark and service marks are property of their owners.

225 S. Lake Avenue,Suite 300 , Pasadena, CA 91101
www.leaderinternationalinc.com

IMPRESSION

7" ANDROID TABLET

Instruction Manual

Contents

Controls 2
Function Keys 3
Touch Screen Interface 6
Screen Interface 9
Settings 10
Web Browsing 18
Task Manager 20
File Manager 21
Music Player 23
Video Player 26
Email Setup 27
Clock Settings 30
APK Installer 32
Specifications 33
FCC Statement 35

Contents

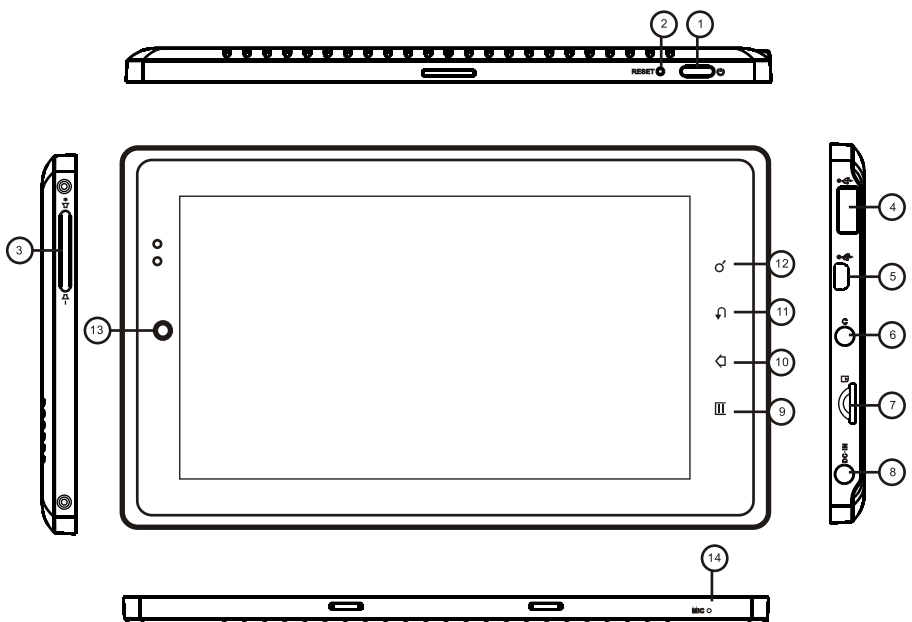

1. Power
2. Reset
3. Volume +/-
4. USB Host
5. Mini USB
6. Head Phone
7. Micro SD Slot
8. DC-In Jack
9. Menu Key
10. Home Key
11. Backspace Key
12. Search Key
13. Camera
14. Microphone

Function Keys

Home Key

- In the option program, menu or webpage, press home key to return to the main interface.
- Press & hold the home key and it will show your recently opened applications.

Menu Key

- Press the Menu key to open the sub-menu for this page.
- Press the menu key again to close the sub-menu.
- Press & hold the menu key in an application to open/close the virtual keyboard.
- When the screen is locked, press the Menu key to enable the screen. Press it again to unlock the screen.
- (If you have set the unlock mode, you can unlock the screen based on your settings.)

Backspace Key

- Press the BACKSPACE key to return to the previous operation or previous screen.

Search Key

- Press search to enter search input interface.

On/Off Key

Turn ON

- Press and hold Power ON/OFF key to turn on the tablet pc.

Turn OFF

- Press ON/OFF key to lock the screen and enter sleep mode.

Accessories Included in The Package:

1	Tablet pc
2	Power adapter
3	USB cable
4	Instruction Manual
5	Warranty Card
6	Stop card
7	Registration card
8	Protective case

Touch Screen Interface

Screen Interface

Main screen interface is similar to a computer desktop.
Place application shortcuts and widgets here.
Touch and “swipe” to go to next page, move things on the screen, etc.

Widgets

Add Widgets:
Press the “Menu Key”. The “Add to Home screen” menu will pop up offering you options to add widgets, change wallpaper, etc.

Deleting Widgets:
Press and hold down the widgets on the screen, then a trash can icon will pop up on the right side of screen. Drag the widgets to the trash can and delete widgets.

Status Bar

Pay attention to the status bar on the top of screen. If icons show on the left, it is a reminder that applications are running.

Status Bar Icons

The icons in the status bar at the top of screen give information about i7 and convince to access your device.

Icon	
SD Card preparing	Volume up
SD Card but removed	Volume down
Removed SD Card	Menu Key
Downloading	Backspace Key
Clock activated	ScreenShorts
Silent mode	Refresh Media
Wi-Fi connected	Battery empty
Battery status	Charging battery

Application List

Click the Application List icon to show the application library.

Touch an application icon to start it up.
Press and hold the application icon the trash can icon will pop up on the right side of the interface. Drag the icon to trash can and delete the icon.
Press the “Menu Key” on this page one sub-menu will pop up, then click “Add Applications” to recover the icon you delete.
Press the “Home” key in the application list interface to return to the home screen.

Settings

Language Settings

Touch: “Settings” > “Language & keyboard” > “Select language” > Choose Language

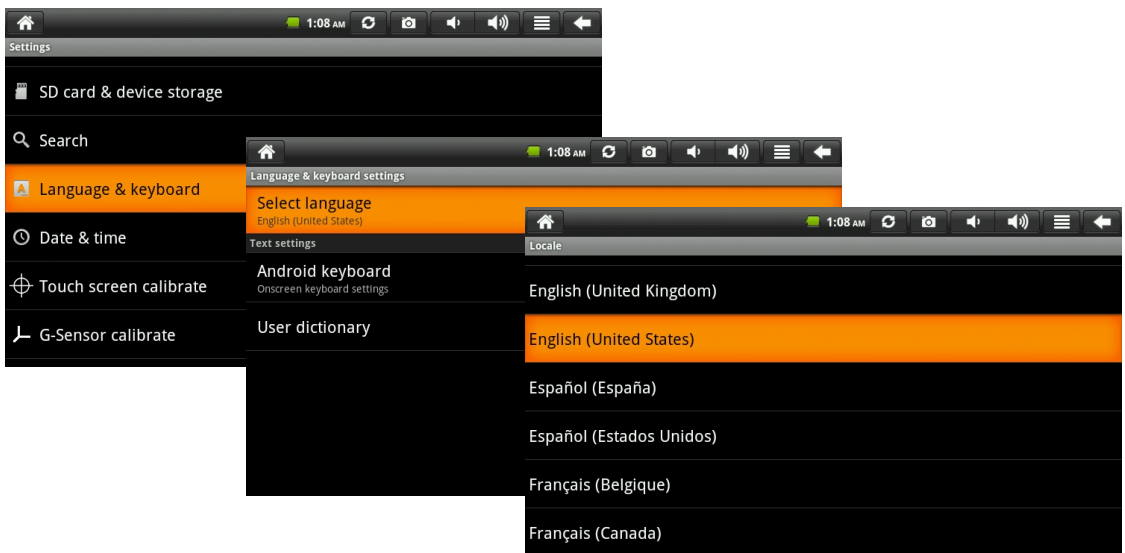

Screen Brightness Settings

Touch: “Settings” > “Display” > “Brightness” > Adjust slider and hit “OK”

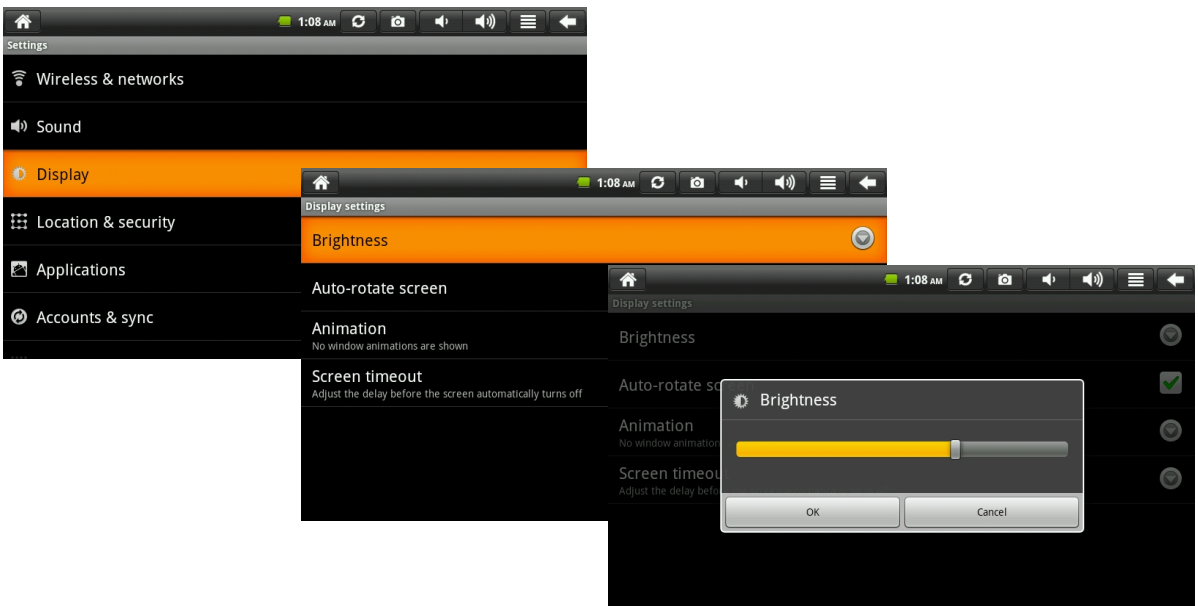

Screen Timeout Settings

Touch: “Settings” > “Display” > “Screen Timeout” > Choose Time

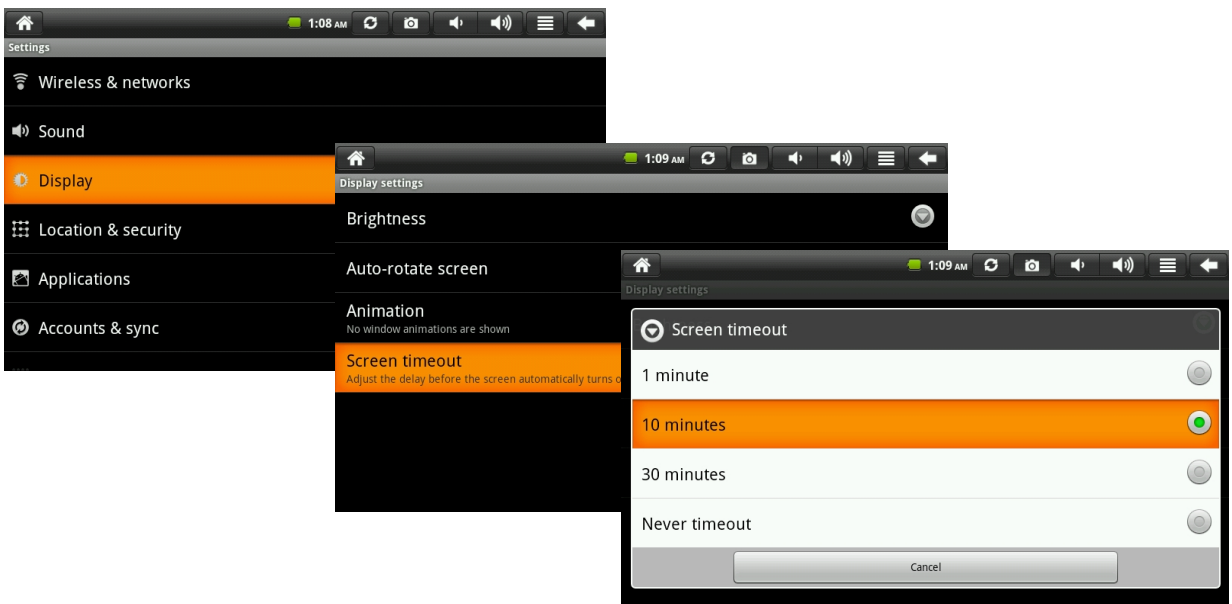

SD card Mount / Un-Mount

After inserting a Micro-SD card to the tablet, do the following to install the card.
Touch: “Settings” > “SD Card & Tablet Storage” >”SD1”> “Mount/Unmount SD1”

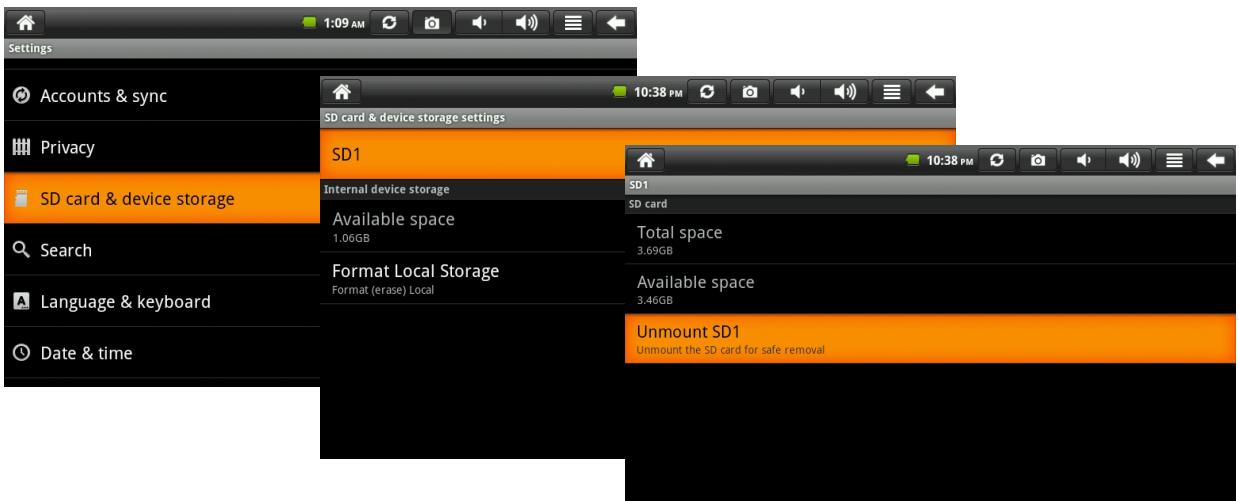

The Settings screen will also show how much memory is available on the card as well as on the internal memory.
After mounting a card, the selection will change to “Unmount SD card”
To uninstall the card select this option.

Settings——SD card & Internal Storage

Have 1.06GB for APK installation

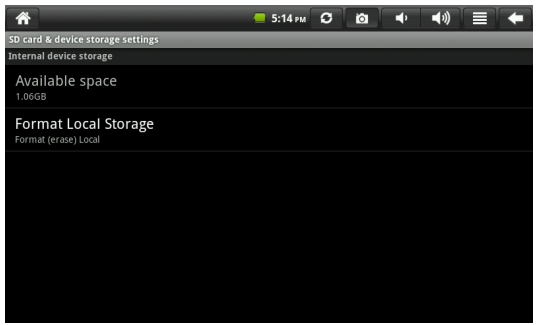

File manage can provide 1.99GB for music, video and kinds of file.

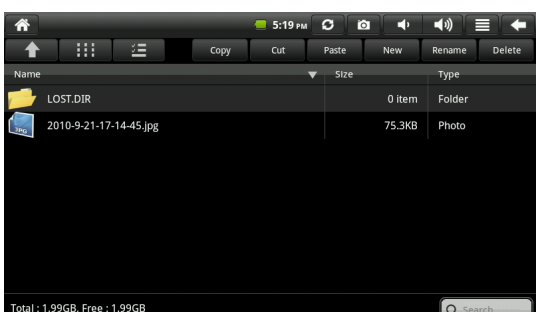

USB Connections

To connect a USB device such as a flash drive, plug it into Mini USB Slot, the USB connection icon will be displayed, however you must first install the device.
First, touch the status bar and swipe down to open the dialog box, and you will see the following picture:

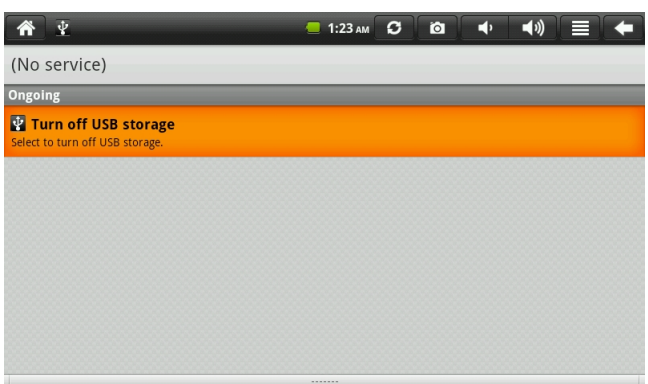

Click on the button: “Turn on USB Storage” , then you will see the following picture:

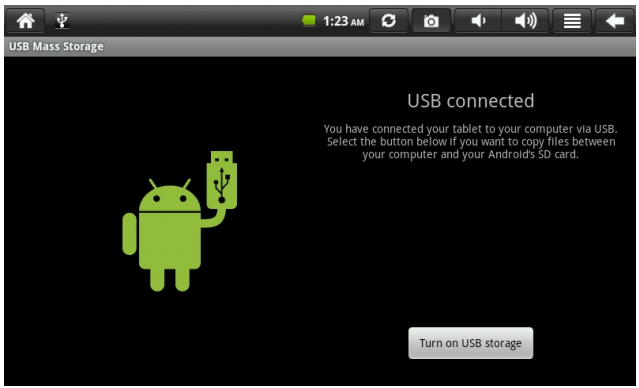
1:23 AM
USB Mass Storage
USB connected
You have connected your tablet to your computer via USB. Select the button below if you want to copy files between your computer and your Android's SD card.
Turn on USB storage

Then you can switch the USB storage on or off.

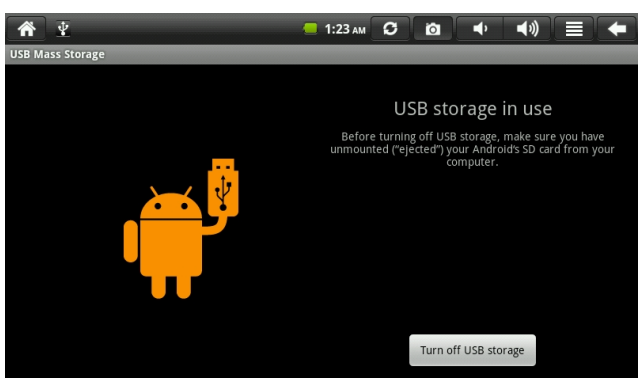
1:23 AM
USB Mass Storage
USB storage in use
Before turning off USB storage, make sure you have unmounted ("ejected") your Android's SD card from your computer.
Turn off USB storage

Wi-Fi Settings

Touch: “Settings” > “Wireless & Networks” > “Wi-Fi Settings”
1.Click Wi-Fi (turn on Wi-Fi). Tablet will start searching for available networks.
2.Choose available network, input password and click “Connect”.
For advanced settings, touch menu icon at right of status bar and choose “Advanced”

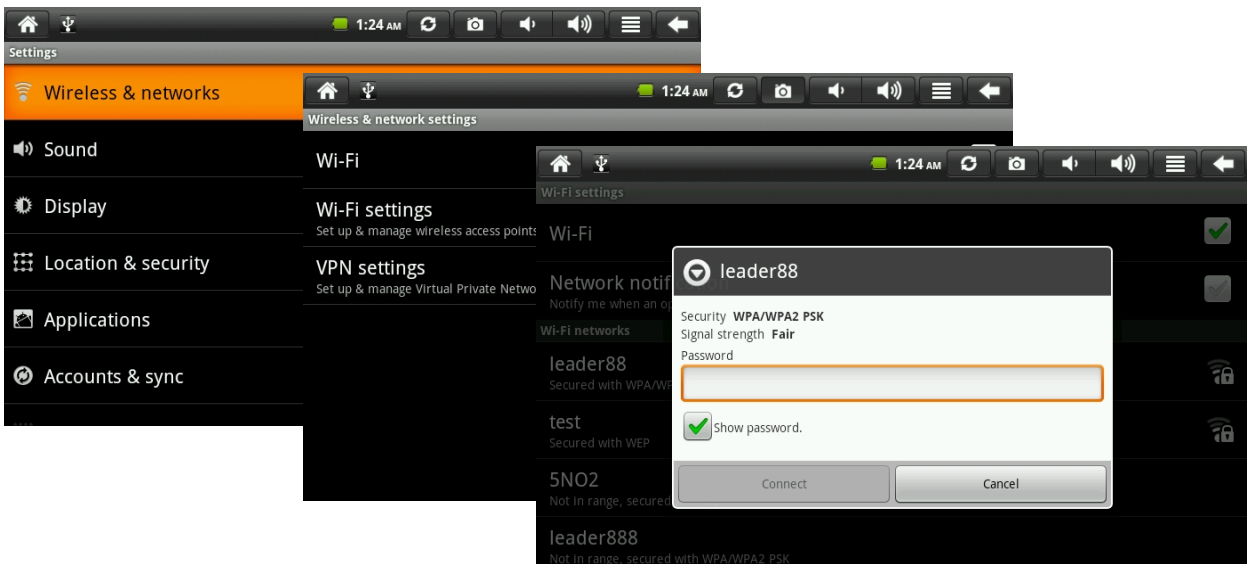

Web Browsing

Before using the internet browser, please make sure Wi-Fi service is turned on.
Click the “Browser” icon to open the browser.
Click on the menu icon at the right side of the status bar for browser commands.
New Window: Opens a new browser window.
Bookmarks: You can also just tap on the bookmark icon on the top right of each page. Here you can see your list of bookmarks. Just tap on one of them to open it in the current window.
New Windows: When you have several windows currently opened, tap on Windows to display the list of currently open windows. Tap on one to open it
Refresh / Stop: Will stop loading the web page, if it is currently loading. Will refresh the current web page once it has stopped loading.
Forward: Will go to the next page that you browsed.
More: Will give you access to other options (Find on page to search for a specific word on the current page, Select text to select a section of text to put into the system clipboard -- which you can then paste into another application such as an e-mail by holding down your finger in a text field), Page info to get information about the current web page, Downloads to view the list of items you have downloaded from the Internet. Go to Home > Files > Downloads to see the actual files that are saved on your device.
Settings to adjust the way the browser works.
Please note that some Web features requiring special plug-in software or Active X controls may not work in this special version of the Web Browser.

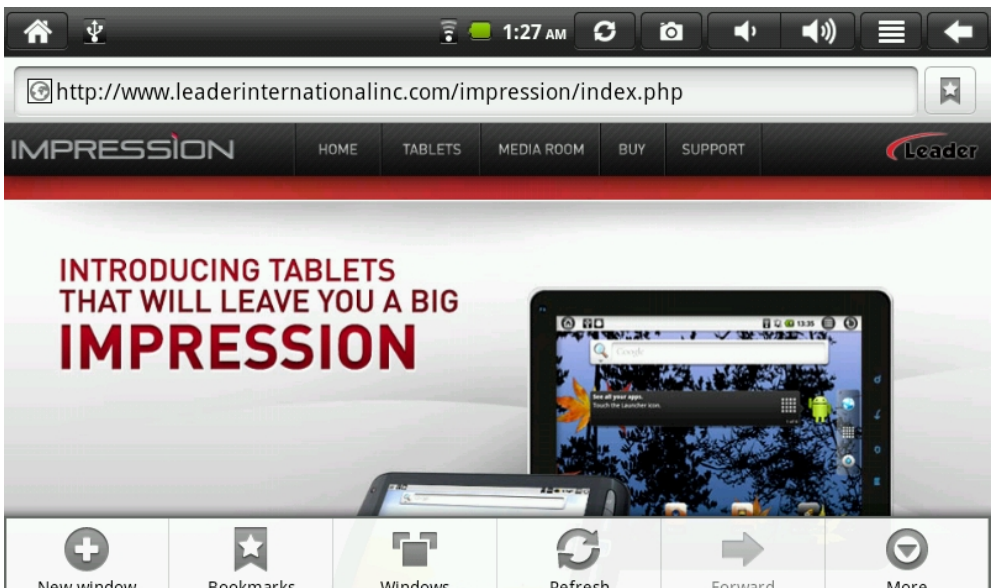
1:27 AM
http://www.leaderinternationalinc.com/impression/index.php
IMPRESSION
HOME
TABLETS
MEDIA ROOM
BUY
SUPPORT
Leader
INTRODUCING TABLETS
THAT WILL LEAVE YOU A BIG
IMPRESSION
New window
Bookmarks
Windows
Refresh
Forward
More

Task Manager

In the application list screen, click the “Task Manager”
The Task Manager shows all the running applications and how much memory they are using.
Click on an application to end it (kill it)or uninstall it.

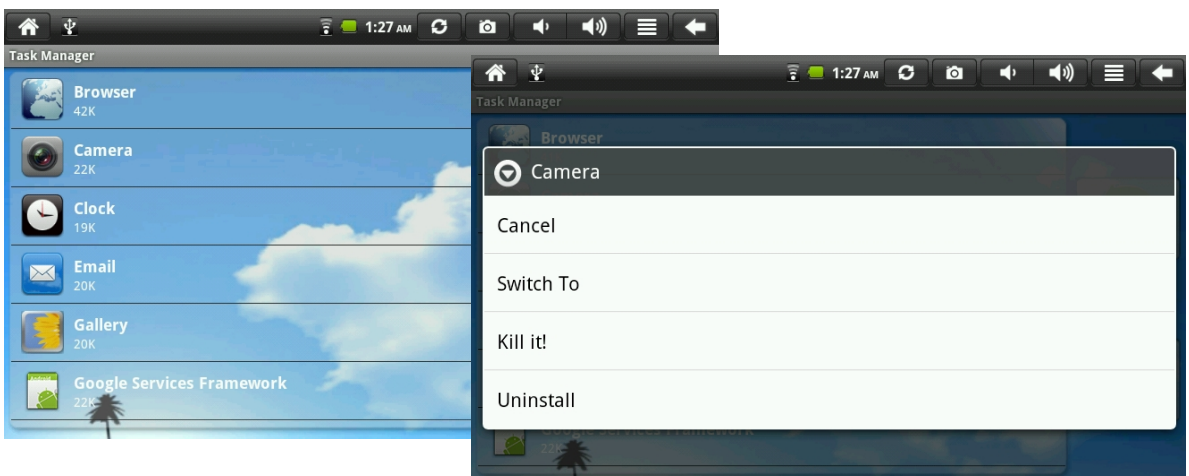

Warning: Use this screen with caution to avoid accidentally removing applications.

File Manager

In the application list screen, click the “File Manager”
Use the file manager to organize files

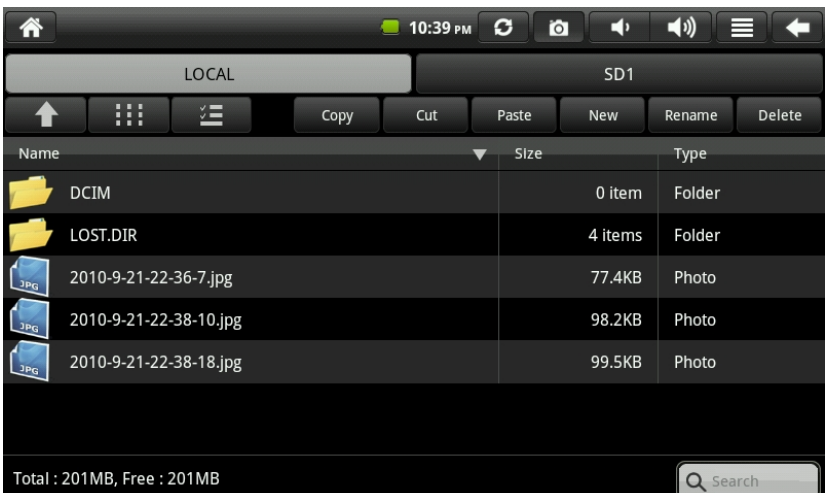

The icons across the top are for navigating to files on the LOCAL， SD1 and to move up and down within the folders.
There is some bottoms menu on the top of screen.

Icon	Description
	Press this icon to return the previous page.
	Press this icon to change the interface as a desktop.
	You can select multiple files after you click this icon
	Press this icon to copy the files you selected.
	Press this icon to cut the files you selected.
	Press this icon to paste the files you copied or cut.
	Press this icon to create a new folder on the current page.
	Press this icon to rename the file you selected.
	Press this icon to delete the files you selected.

Music Player

In the application list screen, click the “Music”icon：

Press the icon “Music” you will see all the music files will be show on the screen. (If you cannot see the music on the list, please press the icon)

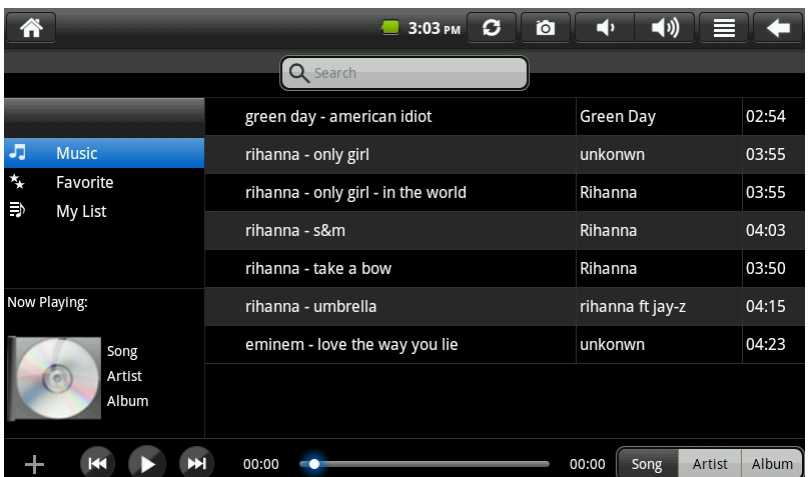

Icon	Description
	Play/Stop the music
	Previous song
	Next song
	Create a new play list
	Show the songs as file name
	Show the songs as artist’s name
	Show the songs as album’s name

When you playing the music you will see the following picture:

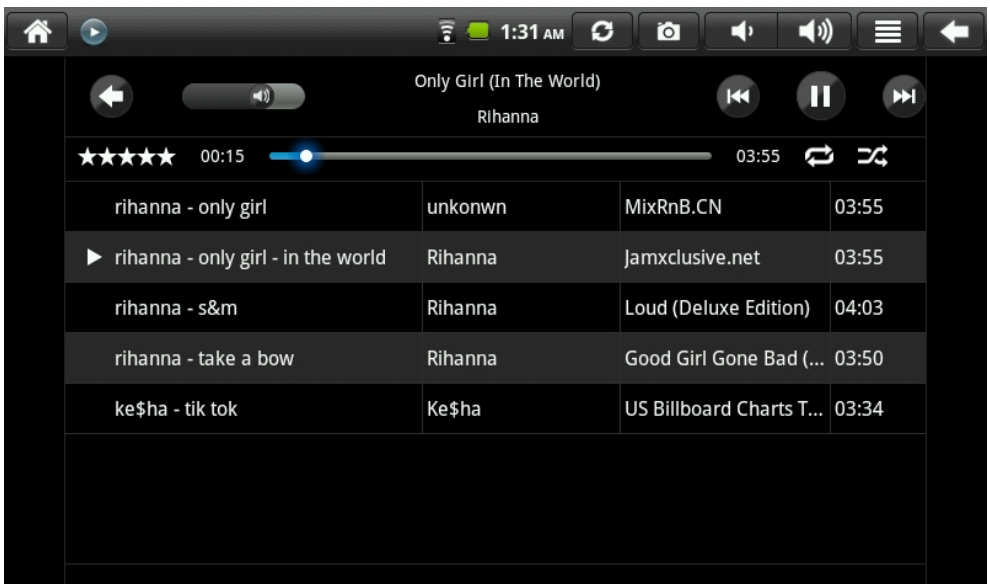

Video Player

In the application list screen, click the “Video Player”icon：

Press the icon “Video Player” you will see all the video files will be show on the screen. (If you cannot see the video on the list, please press the icon)

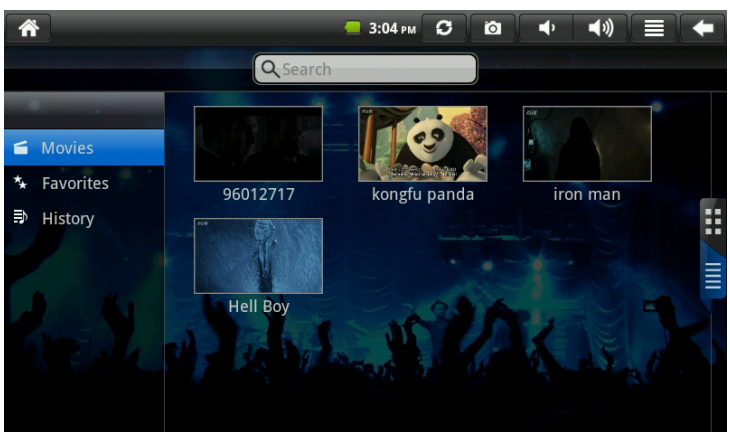

1.Select SD card source or USB

2.Select video from list

3.Video screen will appear and video will start.



Email Setup

In the Application List screen, click the “EMAIL”icon：

1.Input email address and password. Click “Next”.

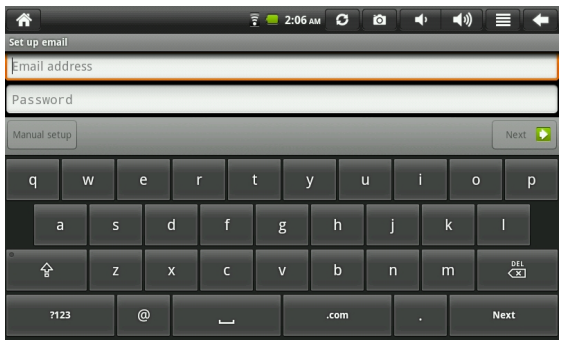

2.Select type of email account.

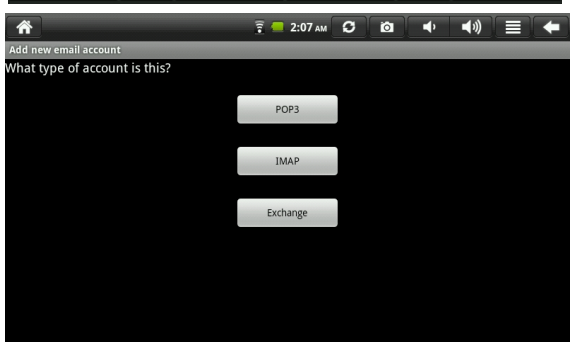

3.Follow the prompts to set up your email account.

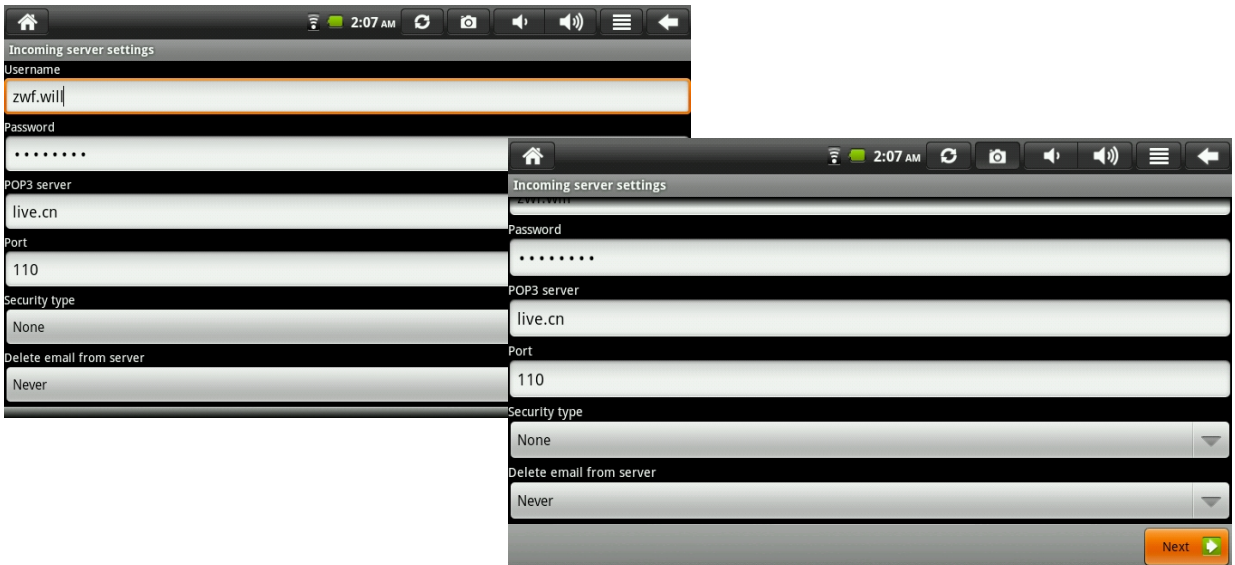

Note: The values in the fields on the left are for illustration only. Set all fields to the appropriate settings for your account.

Select “Next” to go to the next page.
If you are unsure about the settings, contact your email host for details.

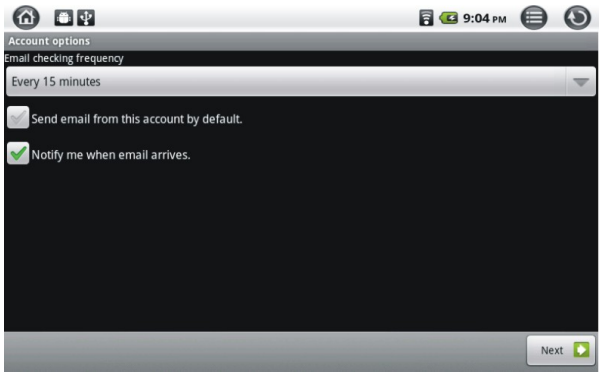

Select how often to check for new email.

Enable / disable email notification.

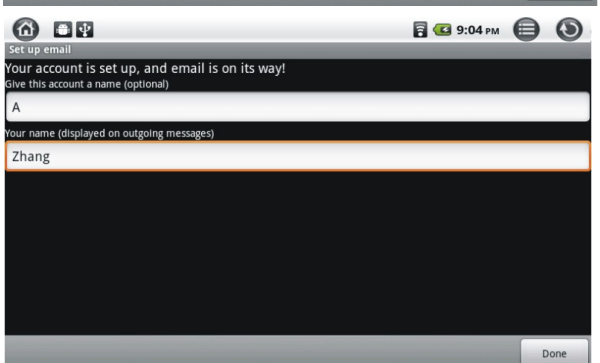

Enter a name for this email account.

Enter how you want your name to be displayed for outgoing messages.

Select “Done”

Clock Settings

In the Application List screen, click the “Clock”

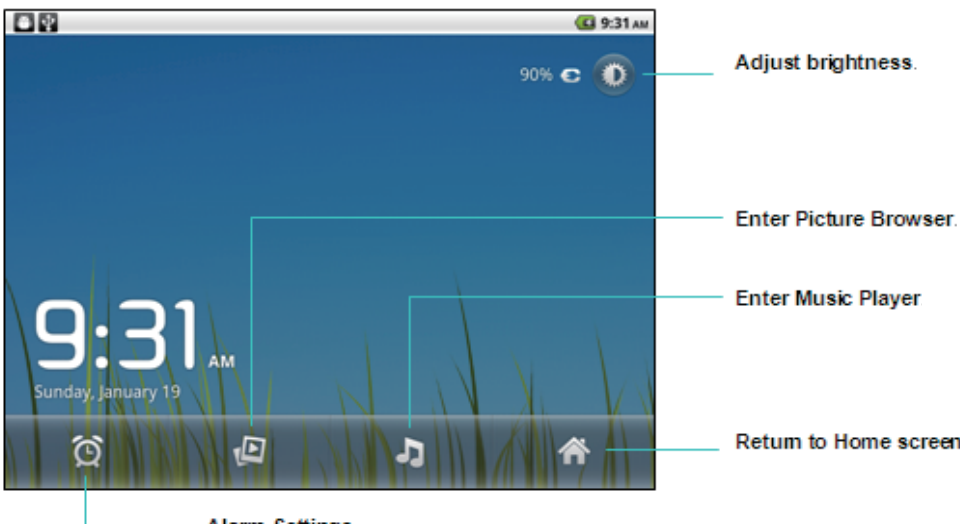

Enter “Alarm Settings” screen (see page 30)
Click “Add Alarm”
Set Time

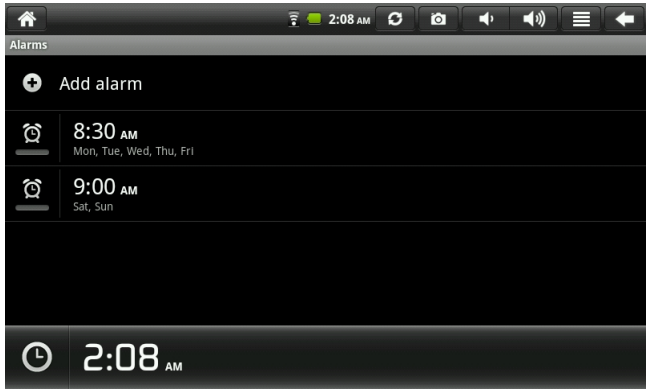

Set time and alarm options

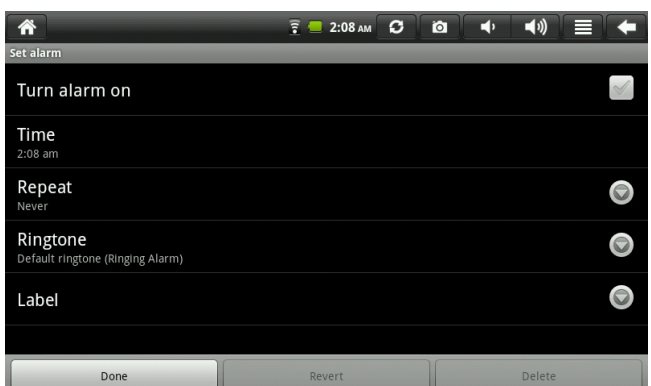

APK Installer

You can manage applications in your device by this program.
Press the application and you will see all the Installation files and all the applications have been installed in your device and Micro-SD card, like the following picture:

You can install/uninstall the applications here.

Press the icon you can select multiple applications to install or uninstall.

Specifications

CPU		Infotmic IMAPX210,ARM11 1GHz
Screen	Display	7 inch , TFT with resistance touch
	Resolution	800x480
Memory	Flash ROM	4GB Nand
	RAM	512MB DDR2
Antenna		Real built-in antenna (Wifi)
Wifi		802.11 b/g/n
G-Sensor		Support
Camera		0.3M pixel Front
Audio		MP3, AAC, WMA, AMR-nb/wb
Video		MPEG4 H264, H263
Photo		JPG, PNG

Input/Output	Touch Panel	Resistance two point touch panel
	Speaker	Built–in single loud speaker
	Headphone	3.5mm stereo Jack
	MIC	Internal MIC-phone
	SD / MMC	TF slot, capacity up to 32GB (support TF HC)
	USB	USB Host (A type) Mini USB Connector (Include USB 2.0 device)
Buttons / Switches		1. Hardware Power ON/OFF key and Reset key 2. Volume Up, Volume Down 3. Back key, Home key, Menu key, Search key,
Battery	Type	Built-in rechargeable 3.7V/3000mAh Li polymer
	Active	More than 4hrs with video play
Charger	Output	5V, 2.0A, DC-JACK
Certification & Regulation		CE, FCC, RoHS

FCC Statement

FCC Caution:

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

·Reorient or relocate the receiving antenna.

·Increase the separation betweenthe equipment and receiver.

·Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

·Consult the dealer or an experienced radio/TV technician for help.

FCC Compliance:

·To assure continued compliance, follow the attached installation instructions.

·Use only the provided shield interface cables when connecting to computer.

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

This device complies with part 15 subpart B of the FCC Rules. Operation is subjected to the following conditions: (1)This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This product may receive radio interference caused by mobile telephones or other products during operation. If such interference is apparent, please increase separation between the product and the mobile telephone orother product.

Industry Canada Requirement:
This Class B apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme á la norme NMB-003 du Canada.

Other names of systems and products mentioned in these instructions are usually the registered trademarks or trademarks of the manufacturers who developed the system or product concerned. The TM and ® marks are not used to identify registered trademarks and trademarks in these instructions.
This manual was correct and complete at the time of printing. However, new specifications and updates can occur at any time without prior notice. No part of this manual may be copied, republished, reproduced, transmitted or distributed in any way without prior written consent of Leader International Inc.. Any unauthorized distribution of this manual is expressly forbidden

Leader International Inc may find it necessary to modify, amend or otherwise change or update this manual. We reserve the right to do this at any time, without any prior notice. All specifications and features are subject to change without notice. All screen shots shown are simulated and may not represent the actual screen on production units sold to consumers.

For instruction manuals or other information, be sure to visit our website at:
www.leaderinternationalinc.com

Or write to us at:
Leader International Inc
225 S. Lake Avenue, Suite 300
Pasadena, CA 91101
USA

Copyright © 2011